

### Electric windows: checking positions

The electric window lifters “forget” their current positions and the automatic open/close function when the battery is disconnected.

- Activate the automatic open/close function as follows:
- Switch on ignition.
- Close windows all the way to their top positions using the window lifters.
- Then operate all window lifter switches again for at least one second in the “close” direction to activate the automatic one-touch function.
- Press switch to open window. The side window should move all the way down automatically.