


Unfastening side support bracket

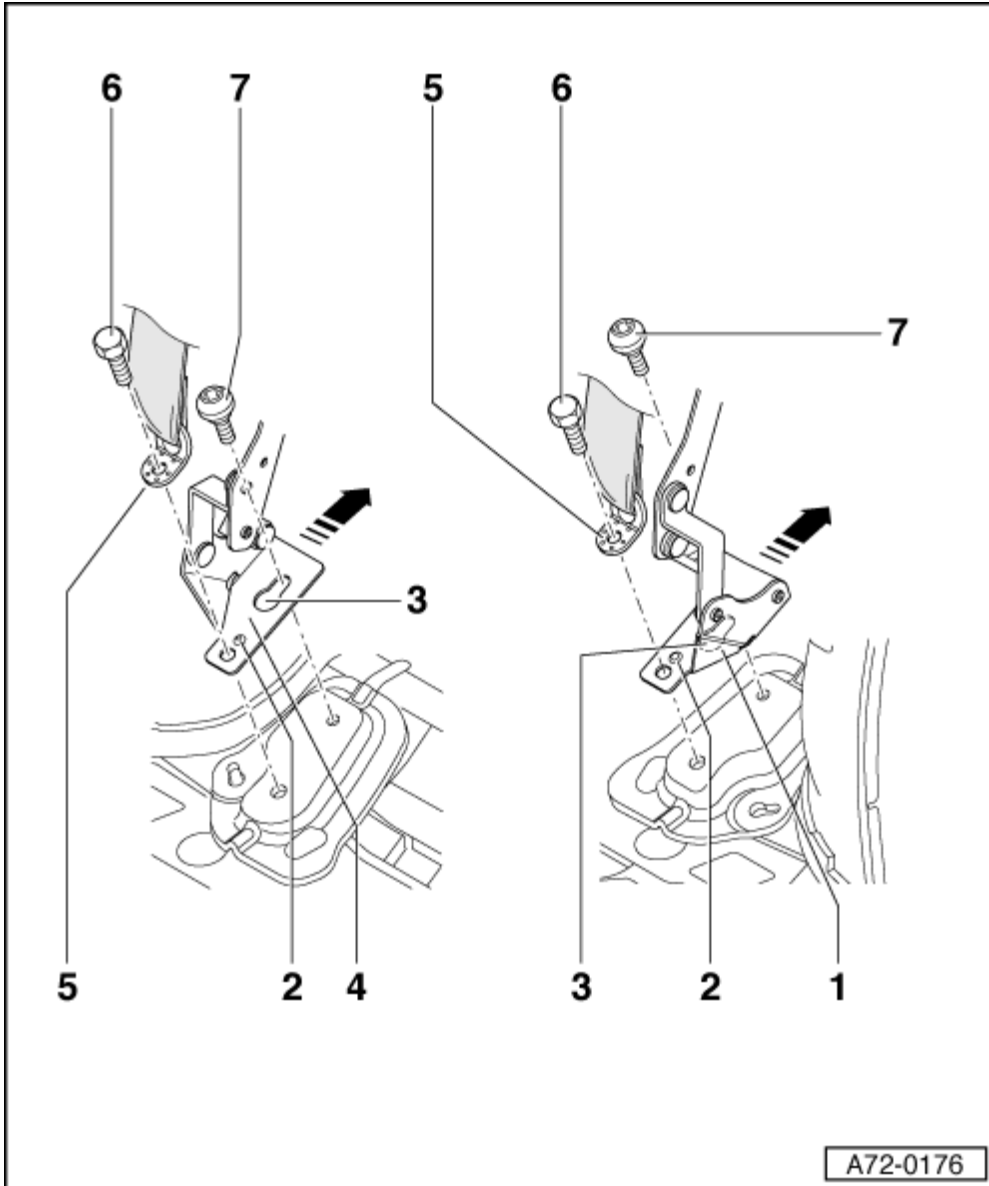

1 - Left side support bracket

t Removing

- Remove rear seat bench → [Chapter](#).
- Unscrew bolts -6- (2x).
- Detach seat belt end fitting -5-.
- Bolts -7- need not be unscrewed.
- Slide rear seat bench to rear in direction of arrow at side and centre support brackets.
- Guide out rear seat bench through wider opening at elongated hole -3-.

t Installing

- Guide in rear seat bench through wider opening at elongated hole -3-.
- Slide rear seat bench forwards at side and centre support brackets.
- When fitting seat belt end trim -5-, make sure seat belt end trim -5- is positioned on retainer tabs -6-.

2 - Mount

- 3 - Elongated hole
- 4 - Right side support bracket
- 5 - Seat belt end fitting
- 6 - Bolts (2x)
 - q Tightening torque 55 Nm
- 7 - Bolts (2x)
 - q Tightening torque 19 Nm